

DATA SHEET

SI-AQ EXPERT

Portable Air Quality Monitor Providing the Latest in Monitoring & Data Logging for IAQ Testing in Buildings, Hospitals, Universities, Labs, Clean Rooms, Airports and More



Accurate / Reliable / Robust / Fast

- Customize Up To 7 Gases
- Temp., %RH, & Barometric Pressure Included
- Real-Time Continuous Data Logging
- Active Internal Sampling Pump
- Large Internal Memory (2,000 Tests)
- Wireless Communication with PC & Printer
- Portable with Swivel Handle



Select Up to **7 Gases** in Total:
TVOCs, CO₂, CO, Formaldehyde, NO₂,
NO, O₂, O₃ (Ozone), SO₂, H₂S



Long Lasting Rechargeable
Battery & AC Charger




Light Weight, Durable, &
Easy to Operate



Real Time Si-AQ PCSoft
PC Software & USB Cable

SI-AQ EXPERT

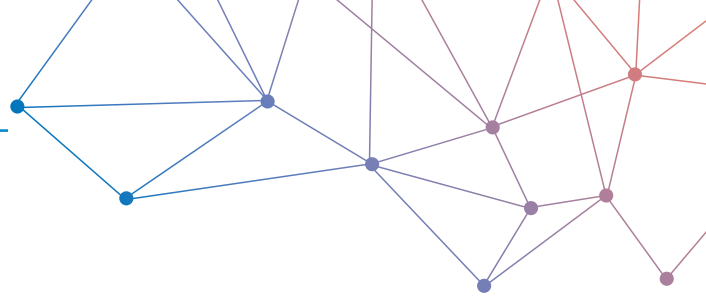

Applications



Airports



Offices



Laboratories

Customizable for Your Application

Up to 7 different toxic gases to meet the needs of most air quality analyses

Easy Calibration

Built-in menu driven calibration procedure


REAL-TIME Data Logging

Save & graph data via USB or wireless Bluetooth® to your PC or tablet

Made in the U.S.A.

Designed and manufactured in the USA

- CO₂
- CO
- CH₂O
- SO₂
- O₂
- NO
- H₂S
- VOCs
- %RH
- NO₂

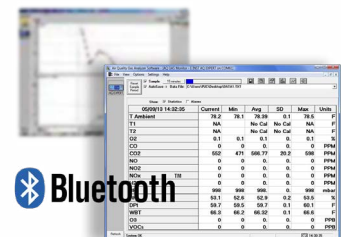

Bluetooth

SI-AQ PCSoft: Real-Time Data Logging Software

Parameter	Sensor	Range	Resolution	Accuracy
Ambient Temperature	Pt100	-40 to 257 °F -40 to 125 °C	0.1 °F 0.1 °C	±0.4 °F (32 - 140 °F) ±0.4 °C (0 - 60 °C)
Relative Humidity	TFC	5 - 95 %	0.1 %	±2 % RH
Barometric Pressure	Solid state	260 - 1260 mbar	1 mbar	±2 mbar
CO ₂	NDIR	0 - 5,000 ppm	1 ppm	±2 % rdg ±10 ppm
CO ₂ High	NDIR	0 - 20 %	0.1 %	±3 % rdg
CO	Electrochemical ¹	0 - 200 ppm	0.1 ppm	±4 % rdg ±0.5 ppm
VOCs	PID	0 - 20,000 ppb 0 - 46,000 µg/m ³	1 ppb 1 µg/m ³	±10 % rdg ±20 ppb
VOCs	PID	0 - 200 ppm 0 - 460 mg/m ³	1 ppm 1 mg/m ³	±10 % rdg ±2 ppm
O ₂	Electrochemical	0 - 25 %	0.1 %	±0.1 % rdg
O ₃ (Ozone)	Electrochemical ^{2,3,4}	0 - 5,000 ppb	1 ppb	-
H ₂ S	Electrochemical ¹	0 - 100 ppm	1 ppm	±4 % rdg ±0.5 ppm
CH ₂ O (Formaldehyde)	Electrochemical ^{2,3}	0 - 10,000 ppb	1 ppb	±5 % rdg ±50 ppb
NO	Electrochemical ¹	0 - 250 ppm	0.1 ppm	±4 % rdg ±0.5 ppm
NO ₂	Electrochemical ^{1,4}	0 - 20 ppm	0.1 ppm	±4 % rdg ±0.5 ppm
SO ₂	Electrochemical ^{1,4}	0 - 20 ppm	0.1 ppm	±4 % rdg ±0.5 ppm
Differential Pressure	Bridge	0 - 32.0 inH ₂ O 0 - 80.0 mbar	0.1 inH ₂ O 0.1 mbar	±1 % rdg
Temperature Type K T1	Tc K	0 - 2,000 °F 0 - 1,100 °C	1 °F 1 °C	5 °F / 3 °C or 2 % of rdg
Air Velocity	Calculated	0 - 300 ft/sec 0 - 91 m/s	1 ft/sec 1 m/s	-
Electromagnetic Compatibility	EN 61326-1, Portable Equipment			

Optional Accessories




Sampling Probe
(Si-AQ Probe with Hose)



Zero Filter for Calibration
(Si-AQ VOC Zero Filter)



Bluetooth® Printer
(Si-AQ Bluetooth® Printer)

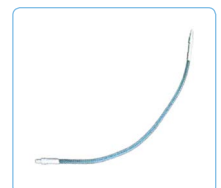

Moisture Exchange Tube
for Calibration (Si-AQ
Moisture Exchange)



Pitot Tube for Air Velocity
(Si-AQ Pitot Tube)




Carrying Case
(Si-AQ Expert Vinyl Case)

¹ Other ranges are available upon request

² Accuracy based on laboratory conditions

³ This sensor may have interference from H₂, CO, H₂S and other reducing gases such as alcohols

⁴ All three O₃, NO₂, & SO₂ sensors cannot concurrently be installed in one instrument

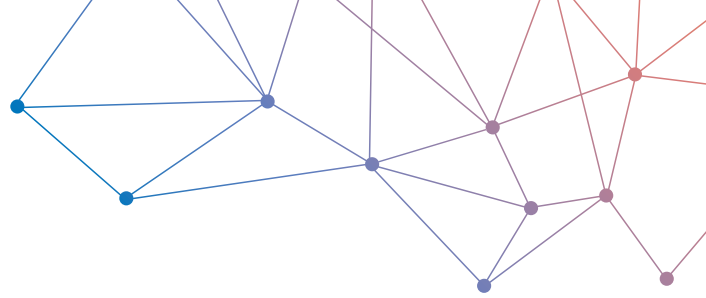

SI-AQ EXPERT

Ordering Code

Part # EXPERT - _ _ - _ - _ - _

Example: EXPERT - Si-AQ CO₂ Sensor (5000 ppm) -
Si-AQ CO Cell (0-200 ppm) - Si-AQ VOC Cell (20,000 ppb)
Ambient Temp, %RH, Barometric Pressure,
CO₂ (0-5,000 ppm), CO (0-200 ppm), VOC (0-20,000 ppb)



All Si-AQ EXPERT Kits Include:

• Ambient Temperature, % Relative Humidity
• Barometric Pressure, Wet Bulb & Dew Point
• Continuous Internal Sampling Pump
• REAL-TIME Data Logging
• PC Software with USB Cable
• Wireless Bluetooth® & External Dongle
• Dual-Channel Tck (Differential Temperature)
• Differential Pressure
• User manual
• Swivel Handle for Easy Transport
• Rechargeable Battery & AC Charger
• Factory Calibration Certificate

Add Up To Seven (7) Additional Sensors:

Si-AQ CO ₂ Sensor (5000 ppm)*	CO ₂ Sensor (0-5,000 ppm)
Si-AQ CO Cell (0-200 ppm)*	CO Sensor (0-200 ppm)
Si-AQ VOC Cell (20,000 ppb)	VOC Sensor (0-20,000 ppb)
Si-AQ VOC Cell (200 ppm)	VOC Sensor (0-200 ppm)
Si-AQ NO ₂ Cell (0-20 ppm)*	NO ₂ Sensor (0-20 ppm)**
Si-AQ O ₃ Cell (0-5 ppm)	O ₃ Sensor (0-5 ppm)**
Si-AQ H ₂ S Cell (0-100 ppm)*	H ₂ S Sensor (0-100 ppm)
Si-AQ O ₂ Cell (0-25%)	O ₂ Sensor (0-25%)
Si-AQ SO ₂ Cell (0-20 ppm)*	SO ₂ Sensor (0-20 ppm)**
Si-AQ NO Cell (0-250 ppm)*	NO Sensor (0-250 ppm)
Si-AQ CH ₂ O Cell (0-10 ppm)	CH ₂ O Sensor (0-10 ppm)

* Other ranges are available upon request

** The following sensors: O₃, NO₂, & SO₂ cannot concurrently be installed on one instrument

Optional Accessories:

Si-AQ Expert Vinyl case	Protective Carrying Case
Si-AQ VOC Zero Filter	Ambient Air Zero Filter
Si-AQ Moisture Exchange	Moisture Exchange Tube for Calibration
Si-AQ Probe with Hose	12" (300mm) Probe, 10' (3m) Dual Hose
Si-AQ Bluetooth® Printer	Bluetooth® Printer
Si-AQ Pitot Tube	12" (300 mm) Pitot Tube (Air Velocity)
Si-AQ Diff. Press. Kit	Differential Pressure Kit



Education



Hospitals

FTang – Si-AQ-Expert-2p – 20/06/2019 – Non-contractual document – We reserve the right to modify the characteristics of our products without prior notice.