

KIRAY 200


Infrared thermometer

New

CE



Infrared thermometer **KIRAY 200** is an infrared thermometer used to diagnose, inspect and check any temperature. Thanks to its elaborated optical system, it allows an easy and accurate measurement of little distant targets. **KIRAY 200** instrument has an internal memory which can save up to 20 measurements.

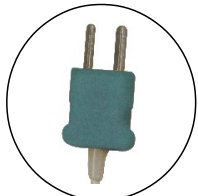

Supplied with thermocouple K probe

TECHNICAL FEATURES

• Instrument features

Spectral response	8 -14 μm
Optical	D.S : 30:1 (50 mm at 1500 mm)
Response time	Less than 1 second
Temperature range	From -50 to +850 °C
Accuracy*	From -50 to -20°C : ±5 °C From -20 to +200 °C : ±1.5% of reading ±2 °C From +200 to +538 °C : ±2% of reading ±2 °C From +538 to +850 °C : ±3.5% of reading ±5 °C
Display resolution	0.1 C °
Emissivity	Adjustable from 0.10 to 1.00 (pre-set at 0.95)
Over range indication	Display indication : « -OL » for a negative over range, « OL » for a positive over range.
Laser sighting	Wavelength : 630-670 nm Output < 1mW, Class 2 (II)
Positive or negative temperature indication	Automatic (no indication for a positive temperature) (-) sign for a negative temperature
Display	4 ½ digits with LCD backlighted display
Auto-extinction	Automatic after 7 seconds of inactivity
High/low alarm	Flashing signal on display and beep signal with adjustable thresholds
Power supply	Alkaline 9 V battery
Autonomy	38 h (inactive laser and backlight) 15 h (active laser and backlight)
Use temperature	From 0 to +10 °C for a short period From 11 to +50 °C for a long period
Storage temperature	From -20 °C to +60 °C
Relative humidity	From 10% to 90%RH in operating mode and >80%RH in storage
Dimensions	175 x 110 x 45 mm
Weight	230 g (included battery)
Memory	20 temperature values with unit of measurement (°C or °F)


*Accuracy for an ambient temperature from 18 to 28°C (with a relative humidity lower than 80% RH)

• K thermocouple probe features

Temperature range	From -40 to +400 °C
Display range	From -50 to +1370 °C
Resolution	0.1 °C
Accuracy	±1.5% of reading ±3 °C
Cable length	1 m


DISTANCE FROM THE TARGET

Distance	150	300	900	mm
Diameter	5	10	30	mm

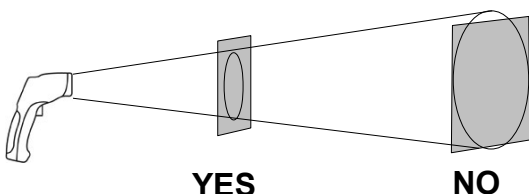


Make sure that the target is larger than the size of the laser sighting.

DESCRIPTION

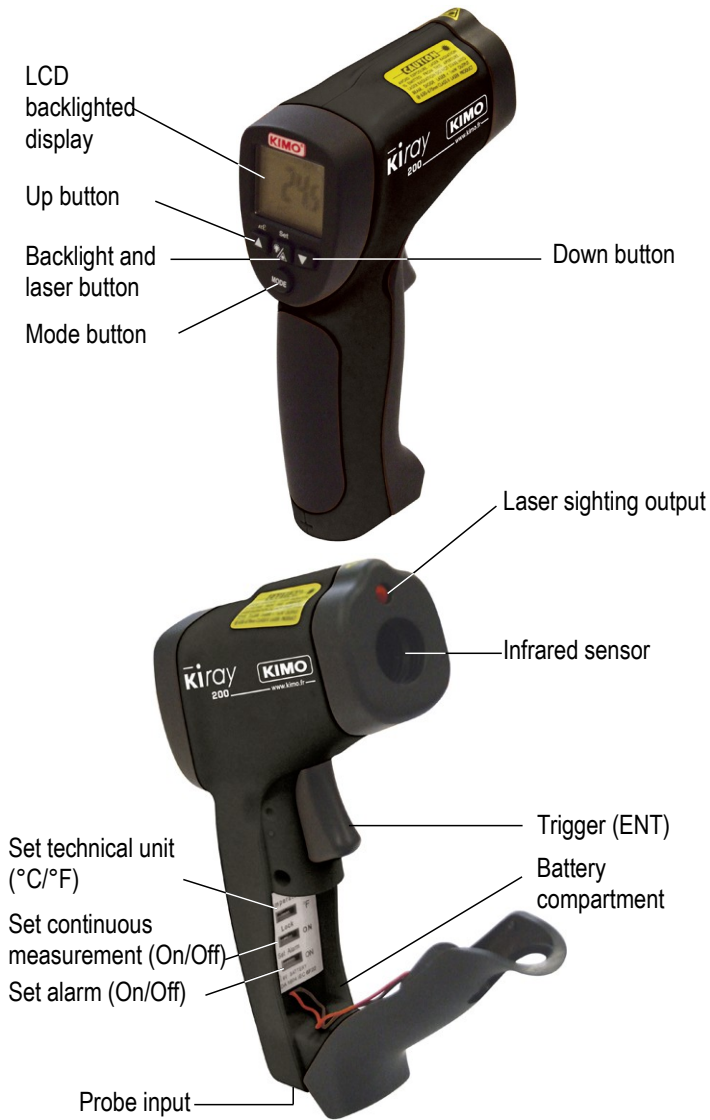

MODES FLOW CHART

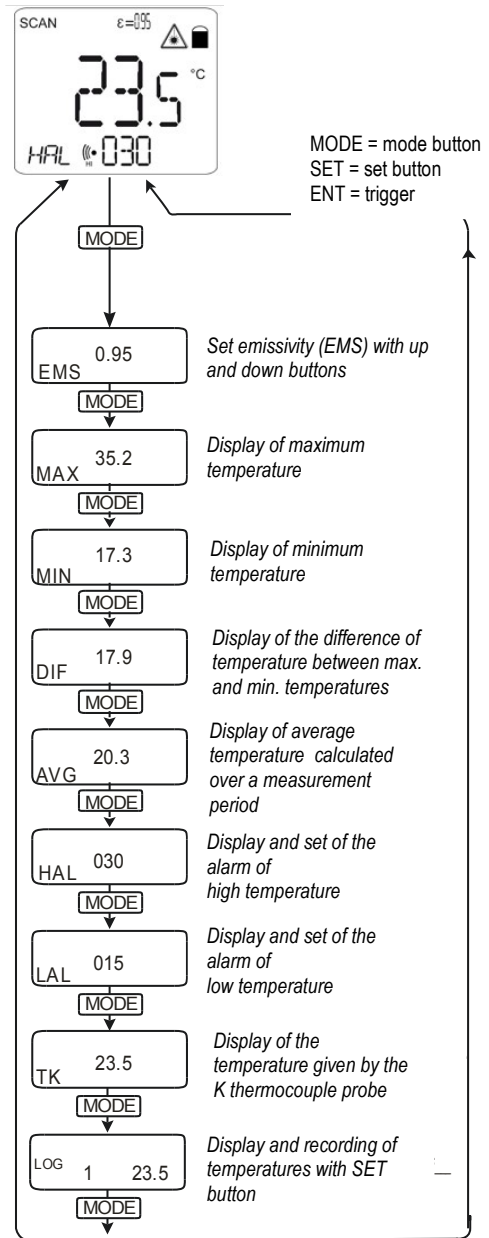


KIRAY 200 BUTTONS



- 1 – Up button. It allows to increment emissivity and the thresholds of high and low alarm and to move to the next recorded value.
- 2 – Set button. It allows to activate or deactivate laser and backlight of the screen. It also allows to record a temperature.
- 3 – Mode button. It allows to navigate through the modes (emissivity, max. value, min. value, difference, average, high alarm, low alarm, TK value and recorded values).
- 4 – Down button. It allows to decrement emissivity and the thresholds of high and low alarm and to move to the previous recorded value.

DISPLAY

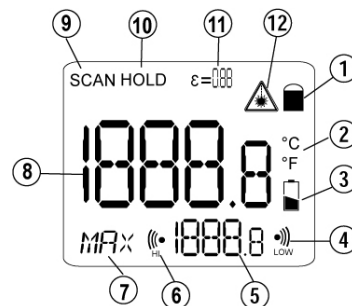

- 1 - Continuous measurement indicator
- 2 - Unit of measurement (°C / °F)
- 3 - Low battery indicator
- 4 - Low alarm indicator
- 5 - Temperature value : MAX, MIN, DIF (difference between MAX and MIN values), AVG (average), HAL (high alarm), LAL (low alarm), TK (K thermocouple probe temperature) and LOG (recorded value)
- 6 - High alarm indicator
- 7 - EMS, MAX, MIN, DIF, AVG, HAL, LAL, TK and LOG indicator
- 8 - Temperature value
- 9 - Current measurement indicator
- 10 - HOLD indicator (fixed measurement)
- 11 - Emissivity value
- 12 - Laser in operation indicator

SETTINGS BEFORE MEASUREMENT


Before measuring temperature, it is recommended to make some settings:

- Set technical unit (°C or °F)
- Set the continuous measurement (On or Off)
- Set the alarm (On or Off)

To set these 3 parameters, open the battery door by pushing on both sides of the trigger. It is not necessary to disconnect the battery to make these settings.

• Set technical unit (°C or °F)


Set the selector unit to °C or °F with a screwdriver.

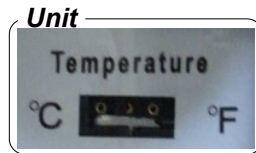

• Set the continuous measurement

This setting allows to let the **Kiray200** instrument in measurement. It does not shut off after 7 seconds.

Set the selector on **On** (continuous measurement is active) or on **Off** (continuous measurement is inactive) with a screwdriver.

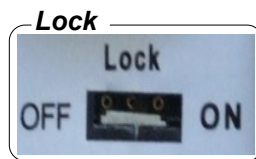

• Set the alarm

This setting allows to **activate** or **deactivate** high and low alarm.

Set the selector on **On** (alarms are active) or on **Off** (alarms are inactive) with a screwdriver.



MODE Mode button

Allows to define the required measurement : Max, Min, AVG, DIF, etc. ... pressing as many times on this button.

- **EMS** : when **KIRAY200** instrument is turned on, press **MODE** button until **EMS** appears at the bottom left of the screen. Set emissivity by pressing on **UP** button to increment it or **DOWN** button to decrement it. By default, the emissivity is set to 0.95.

- **MIN** ou **MAX** : select the Min or Max. temperature.

During a measurement period, keep ENT pressed : the **KIRAY200** instrument displays the temperature of the area sighted by the laser. Press **MODE** button until **MAX** or **MIN** is displayed at the bottom of the screen. These values relate to the temperatures taken by the instrument and the thermocouple probe.

- **DIF** : during a measurement period, press **MODE** button until **DIF** appears at the bottom left of the screen. The displayed value corresponds to the difference between **MAX** value and **MIN** value.

- **AVG** : during a measurement period, press **MODE** button until **AVG** appears at the bottom left of the screen. The displayed value corresponds to the average temperature calculated during a measurement period.

- **HAL** : when **KIRAY200** instrument is turned on, press **MODE** button until **HAL** appears at the bottom left of the screen. The displayed value corresponds to the alarm of **high temperature**. Set this alarm by **incrementing** it with up button or by **decrementing** it with down button.

- **LAL** : when **KIRAY200** instrument is turned on, press **MODE** button until **LAL** appears at the bottom left of the screen. The displayed value corresponds to the alarm of **low temperature**. Set this alarm by **incrementing** it with up button or by **decrementing** it with down button.



Alarms must be activated (see paragraph Settings before measurement)

- **TK** : when **KIRAY200** instrument is turned on, press **MODE** button until **TK** appears at the bottom left of the screen. The displayed value corresponds to the measured temperature by the K thermocouple probe.

- **LOG** : when **KIRAY200** instrument is turned on, press **MODE** button until **LOG** appears at the bottom left of the screen. Next to **LOG**, a number between 1 and 20 also appears ; it corresponds to LOG location. If no temperature has been recorded in the shown LOG location, 4 dashes will appear in the lower right corner. To record a temperature, you have to be on **LOG** mode, then choose an empty LOG location (---- visible) and press **SET** button during the measurement or when the measurement is fixed (**HOLD**). From this mode, you can also clear all the recorded temperatures : press and keep the trigger pressed and press **down** button at the same time until reaching the zero recording, then press **SET** button while keeping **ENT** pressed. A beep is emitted by **KIRAY200** instrument and the **LOG** location moves automatically to 1, signifying that all data have been cleared.

OPERATING MODE

- Press ENT trigger to turn on the instrument. The backlighted screen, indicating the temperature, and the laser turn on.
- Keep ENT pressed. Place the laser sighting at the center of the area to be measured.
- Release ENT.
- Read the displayed temperature. (The display stays on for 7 seconds after the last manipulation).
- **HOLD** appears at the top left of the screen ; measurement stays displayed.
- The **KIRAY200** instrument keeps in memory the last function used.

COMMAND BUTTONS

ENT Trigger

- Turning on the device.
- **ENT** pressed : activation of the laser sighting and temperature measurement.
- **ENT** released : display is on **HOLD** (**HOLD** fixed), and give the last measurement. Display stays on for 7 seconds. If no buttons are activated and continuous measurement is inactive, the instrument turns off after 7 seconds.

EMISSIVITY

Emissivity is a term used to describe the energy-emitting characteristics of materials.

Most (90% of typical applications) organic materials and painted or oxidized surfaces have an emissivity of 0.95 (pre-set in the unit). Inaccurate readings will result from measuring shiny or polished metal surfaces. To compensate; cover the surface to be measured with masking tape or flat black paint. Allow time for the tape to reach the same temperature as the material underneath it. Measure the temperature of the tape or painted surface.


See table below for values of emissivity of specific materials :

Aluminium	0.30	Ice	0.98
Asbestos	0.95	Iron	0.70
Asphalt	0.95	Lead	0.50
Basalt	0.70	Limestone	0.98
Brass	0.50	Oil	0.94
Brick	0.90	Paint	0.93
Carbon	0.85	Paper	0.95
Ceramic	0.95	Plastic	0.95
Concrete	0.95	Rubber	0.95
Copper	0.95	Sand	0.90
Dirt	0.94	Skin	0.98
Frozen food	0.90	Snow	0.90
Hot food	0.93	Steel	0.80
Glass	0.85	Textile	0.94
Water	0.93	Wood	0.94
Fresh foodstuffs between 0 and 5 °C			0.90

To avoid any inconvenience:

- Do not aim directly or indirectly (reflection on reflective surfaces) the laser in the eyes.
- Change the batteries when the indicator blinks.
- Do not use the thermometer around explosive gas, vapor or dust
- Do not leave the device with the lock on (lock at the top right of the screen) because in this configuration, the instrument does not turn off automatically.

To prevent damage on your instrument or equipment please carefully respect these conditions :

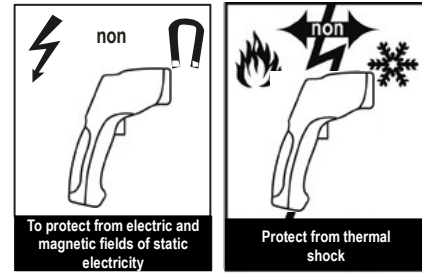

CE CERTIFICATION

This device meets with following standards' requirements.

- EN 50081-1 : 1992, Electromagnetic compatibility, Part 1
- EN 50082-1 : 1992, Electromagnetic compatibility, Part 2




IMPORTANT INFORMATION


For correct measurements :

- Do not take any measurement on metal or shiny or reflective surfaces.
- Do not measure through transparent surfaces such as glass, for example.
- Water vapor, dust, smoke, etc ... may prevent correct measurements because they obstruct the optic of the instrument.
- Make sure that the target is larger than the size of the laser sighting.

Infrared thermometer, how it works?

Infrared thermometers can measure the surface temperature of an object. Its optic lens catches the energy emitted and reflected by the object. This energy is collected and focused onto a detector. This information is displayed as temperature. The laser pointer is only used to aim at the target.

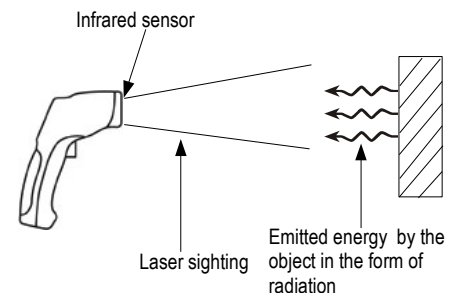

 Once returned to KIMO, required waste collection will be assured in the respect of the environment in accordance to guidelines relating to WEEE.

www.kimo.fr

EXPORT DEPARTMENT
Boulevard de Beaubourg - Emerainville - BP 48
77312 MARNE LA VALLEE CEDEX 2
Tel : + 33.1.60.06.69.25 - Fax : + 33.1.60.06.69.29

